SILVERCREST®

PERSONAL CARE

Epilator SE 32 A1

GB IE

Epilator

Operation and Safety Notes



(GB) (IE)

Before reading, unfold the page containing the illustrations and familiarise yourself with all functions of the device.

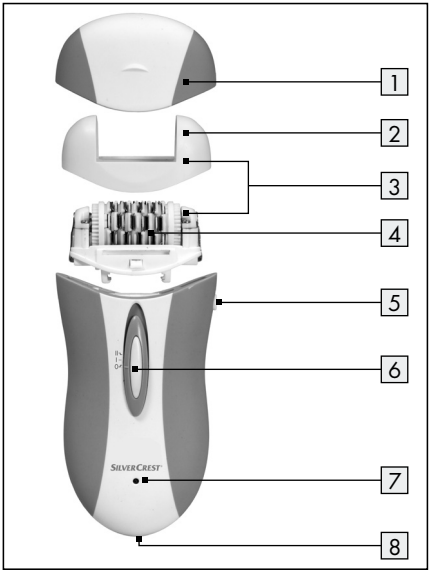
1
2
3
4
5
6
7
8
SILVERCREST

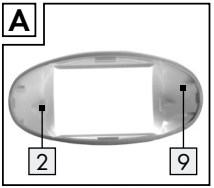
A
2
9

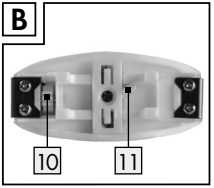
B
10
11

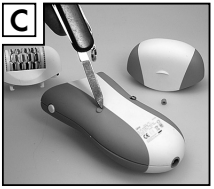
C

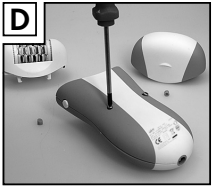
D

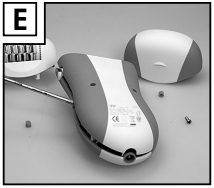
E

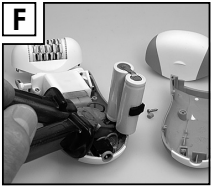
F

Introduction ..... Page 7
Proper use ..... Page 8
Included items ..... Page 8
Parts list ..... Page 8
Technical data ..... Page 9

Safety
Safety advice ..... Page 9

First use
Preparing for first use ..... Page 12
Switching on ..... Page 12
Epilating ..... Page 13
Switching off ..... Page 14
Getting accustomed to your epilator ..... Page 14

Cleaning, storage
Cleaning the epilator head ..... Page 14
Cleaning the housing and the plug-in mains adapter ..... Page 15
Storage ..... Page 16

Disposal
Directives on disposal ..... Page 16
Discharging batteries, disposal ..... Page 17
Removing the batteries ..... Page 17

Warranty and service ..... Page 18

Conformity ..... Page 18

The following icons/symbols are used in this instruction manual:	
	Read instruction manual!
	Keep children and other unauthorised personnel at a safe distance when using electrical devices.
	Avoid damaging the insulation on the lead: Do not trap the lead in the cupboard doors, pull it over hot surfaces or sharp edges!
	Do not use this device near baths, wash basins or other vessels containing water.
	Observe caution and safety notes!
	Caution – electric shock! Dangerous electric current – danger to life!
V~	Voltage
V⎓	Direct current
	Protection category II power tool; double insulated
	Dispose of the packaging, NiMH rechargeable batteries and appliance in an environmentally friendly way!

Epilator

Introduction

Dear Customer,
We are pleased you chose to purchase this product and hope you enjoy using your new epilator from Silvercrest.

Please read carefully through these operating instructions before using your epilator for the first time.
This epilator is fitted with safety features. In spite of this you should read through the safety advice carefully and use the epilator only as described in these instructions. By doing this you will avoid accident, injury or damage.
Keep these instructions in a safe place for future reference. If you pass on the product to a third party, please include this documentation as well.

Function:
This epilator removes unwanted body hair from arms, legs and the bikini zone together with the hair root. With repeated use the hair grows back more slowly and is finer.

Product characteristics:
The epilator head with its very high number of 32 tweezer pairs removes even the shortest hairs quickly and completely in just a few passes. It is particularly kind to your skin and suitable for any hair type. The epilator has two speeds and a safety lock for safe transport.

Proper use

This epilator is intended solely for the removal of body hair from arms, legs, armpits and bikini area of humans. It is not intended for removing hair from the head, eyebrows or from animals. The epilator is intended for indoor use only and not for commercial purposes. The warranty is invalidated if the device is used for any purpose other than indicated.

Included items

1 Epilator
1 Plug-in mains adapter
1 Storage bag
1 Cleaning brush
1 Operating instructions

Parts list

1 Protective cap
2 Epilator head frame
3 Epilator head
4 Epilator roller system
5 Head release button
6 On / Off switch with safety lock
7 Charging indicator (LED)
8 Connection for mains adapter
9 Double guide
10 Gearwheel
11 Release lever

Technical data

Epilator

Art. No.:	2827L2
Rechargeable batteries:	2x NiMH 4 / 5 HR6 (AA) 1200 mAh

Plug-in mains adapter

Type:	HK-X303-A030
Input:	100-240 V ~, 50 / 60 Hz 0.2 A
Output:	3 V⎓ 1,000 mA
Protection class:	⧈

Safety

Safety advice

Please read the operating instructions through carefully before use. After use, store the epilator in a safe place, out of reach of children.

This device is not intended to be used by persons (including children) with restricted physical, sensory or mental abilities or with insufficient experience and / or knowledge, unless they are supervised by a person who is responsible for safety or they have received instruction on how to use the device from such a responsible person. Children should be supervised in order to ensure that they do not play with the device.

DANGER FOR SMALL CHILDREN AND INFANTS!

- **Danger of suffocation:** Keep transport packaging (among other things polythene bags) away from children!
- **Danger of electric shock:** Connecting to an electrical socket near containers of water or other liquids may result in electric shock.
- **Danger of injury** from the epilator tweezer discs. Keep children away from the epilator, mains adapter and electrical sockets!

DANGER OF ELECTRIC SHOCK!

-
  Never use the epilator in the bath, shower, or near other containers of liquids.
- If the epilator falls into water pull the mains adapter out of the mains socket immediately! Only then take the epilator out of the water.
- After each use pull the mains adapter out of the mains socket – but never by the lead!
-
  Avoid damaging the insulation on the lead: Do not trap the lead in the cupboard doors, pull it over hot surfaces or sharp edges!

DANGER OF INJURY!

- Do not use the epilator if it is damaged or defective.
- Do not use the epilator on open wounds, cuts, sunburn or blisters.
- If you have particularly sensitive skin, varicose veins, haemophilia or a skin ailment please contact your doctor before first use.

- Keep the epilator away from your scalp and eyes so that you do not catch hair from your head, eyebrows or eyelashes in the tweezers.

DANGER OF DAMAGE TO THE PRODUCT!

- The voltage characteristics on the rating plate must agree with those of the domestic supply.
- The installation of a residual current device (RCD) with a rated trip current of not more than 30 mA into the household electrical circuit will provide you with additional protection. An electrician will be able to advise you on this.
- Do not use the epilator in the bath or shower.
- Never immerse the mains adapter in water or any other liquid.
- Use the supplied original plug-in mains adapter only. If the plug-in mains adapter is defective or damaged a replacement can be obtained from our Service Centre (see the section about "Warranty and Service").
- Avoid the dangers of the plug-in mains adapter heating up excessively: Connect to an easily accessible mains socket only; do not cover.
- Do not expose the epilator to temperatures below –10 °C or above +40 °C.
- Have all repairs carried out at a specialist electrical repair workshop or our Service Centre (see the section about "Warranty and Service").

First use

Preparing for first use

DANGER!
DANGER TO LIFE FROM ELECTRIC SHOCK!

Never touch the epilator with wet hands if it is connected to the mains (i.e. both mains operation and charging mode).

Mains operation

- Connect the lead to the connection for mains adapter 8.
- Insert the plug-in mains adapter into the mains socket (100-240 V~).
- The epilator can be used immediately.

Battery operation

- Before using the epilator for the first time charge it for at least 12 hours; for subsequent uses charging for 8-10 hours is sufficient.
- Connect the lead to the connection for mains adapter 8.
- Insert the plug-in mains adapter into the mains socket (100-240 V~).
- The charging indicator (LED) 7 illuminates to show that charging is taking place.
- The epilator will operate for approx. 60 minutes with fully charged batteries.

Switching on

Tip: The safety lock prevents the epilator from switching itself on accidentally, e.g. during transport.

- Pull off the protective cap 1 from the epilator head 3.
- Press and hold down the safety lock button in the middle of the On/Off switch 6 and slide the switch upwards into setting "I" or "II":
  Setting 1 (slower speed) for particularly sensitive or difficult to access parts of your body.
  Setting 2 (higher speed) for quicker epilating of larger, less sensitive areas (e.g. legs, arms).

Epilating

DANGER OF SKIN IRRITATION!

- When using the epilator do not pass it too often over the same part of your skin. Do not apply too much pressure!
- Do not use body lotion or any other kind of similar substance (e.g. cosmetics) before using your epilator!
  Not observing this advice may result in the tweezers not being able to capture the hairs properly; the tweezers become sticky and their epilation effect is reduced.

Tip: Test your skin sensitivity first by trying the epilator on a small patch of skin.

- Wash the area to be treated with warm soapy water.
- Dry the skin carefully.
- Rub the skin to be epilated against the direction of hair growth with a rough sponge or luffa glove to make the hair stand up.
- Switch on the epilator.
- Tighten the selected patch of skin.

- □ Place the epilator on the skin at 90°; with the switch facing you.
- □ Guide the epilator with a circular motion over the skin surface.

● Switching off

- □ Slide the On / Off switch 6 downwards into position "0".

● Getting accustomed to your epilator

After the first time of use in particular, you may experience some slight temporary skin irritation and / or redness. Please contact your doctor if this irritation lasts for more than 48 hours.

● Cleaning, storage

DANGER!
DANGER TO LIFE FROM ELECTRIC SHOCK!

- ■ Disconnect the epilator from the mains and pull out the lead every time before cleaning it!

● Cleaning the epilator head 3

⚠ **CAUTION!** Do not clean the epilator head 3 with water or liquids other than medical alcohol. Use the cleaning alcohol simply for removing grease or other residues from the epilator head 3. Otherwise there is a danger that the device will be damaged.

Tip: Clean the epilator head 3 carefully after each use to keep your epilator working effectively.

- Slide the On / Off switch 6 downwards into position "0".
- Press the head release button 5 on the side and pull off the epilator head 3 with your other hand.
- Press the small unlocking lever 11 on the underside of the epilator head 3 to the side and take the epilator roller system 4 out of the epilator head frame 2 (see Fig. B).
- Using the supplied cleaning brush remove the hairs from between metal tweezers and the plastic parts.
- Turn the epilator rollers to remove any hairs trapped in the epilator pairs.
- Insert the epilator roller system 4 back into the frame: Make sure that the double guides 9 and the gearwheel 10 are on opposite sides.
- Listen for the epilator roller system 4 to engage with an audible click.
- Make sure that the gearwheels 10 on the underside of the epilator roller system 4 and on the epilator are positioned one above the other.
- Replace the epilator head 3 on to the epilator. Listen for the audible click.
- Replace the protective cap 1.

Cleaning the housing and the plug-in mains adapter

⚠ **CAUTION!** Do not use scouring agents. They may scratch the surface.

- Use a soft, slightly moist cloth or sponge only to wipe the epilator housing and the plug-in mains adapter.

Storage

- □ Out of reach of children
- □ In a dry secure place
- □ In the supplied storage bag

Disposal

Directives on disposal

Protect the environment!

There are two firmly integrated NiMH rechargeable batteries inside the appliance.

Do not dispose of the batteries or the device with normal household refuse. Contact your local council to find out about environmentally friendly and proper disposal of the device (as electrical scrap). Observe the applicable local and national disposal regulations with regard to separation of materials, waste collection and recycling centres.

The packaging is wholly composed of environmentally friendly materials that can be disposed of at a local recycling centre.

Discharging batteries, disposal

This epilator contains two permanently in-built NiMH rechargeable batteries. They must be completely discharged before removal and disposal:

- Switch off the epilator and let the motor run until it comes to a complete standstill.
- This will fully discharge the batteries.
- Remove the batteries (see the section about "Removing the batteries").
- Dispose of the batteries, the epilator and the packaging at an authorised collection point only.
- Observe the applicable local and national regulations for refuse disposal, material separation, waste collection and recycling.

Removing the batteries

DANGER! RISK OF INJURY! Only remove the rechargeable batteries when they are completely flat: disconnect the appliance from the power cable, switch it on and let it run until the motor comes to a complete standstill.

Note: After discharging, there is still some residual capacity in the rechargeable batteries. Repeatedly switching it on and letting the motor run will ensure the batteries become completely flat.

- Before removing the rechargeable batteries, disconnect the epilator from the mains supply and from the cable and make sure the rechargeable batteries are completely flat.
- Do not short-circuit the removed rechargeable batteries! They may become very hot if they still contain some charge!

- On no account should you operate the dismantled epilator again!
- Push the On/Off switch 6 down to the "0" position.
- Removing the epilator head 3.
- Using a pointed implement remove both rubber covers on the back of the device (see Fig. C).
- Screw out the screws using a small Phillips screwdriver (see Fig. D).
- Separate the two halves of the housing by prising them apart using a flat-headed screwdriver (see Fig. E).
- Using a set of pliers free the batteries from the contact plates and dispose of them separately (see Fig. F).

It is illegal to dispose of rechargeable batteries/batteries with normal domestic waste. Please dispose of the rechargeable batteries via the collection system or a specially provided collection box in the shop.

Warranty and service

The Service Hotline for your country is shown on the enclosed warranty documentation.

Conformity

The CE marking has been applied to the product in compliance with the following European directives:

2006/95/EC Low Voltage Directive
2004/108/EC Electromagnetic Compatibility (EMC) Directive

The Declaration of Conformity is held by the distributor.

LUTTER & PARTNER GmbH
Schleissheimer Strasse 93 a
85748 Garching bei München
GERMANY

NOTE:
We reserve the right to make technical and optical modifications to the epilator and its accessories in the course of product improvement.

IAN 58845
LUTTER & PARTNER GmbH
Schleissheimer Strasse 93 a
D-85748 Garching bei München
L&P Art.-Nr. 2827L2

© by ORFGEN Marketing

Last Information Update: 11 / 2010
Ident.-No.: SE 32 A1-112010-6